

INSTRUCTIONS FOR ADDITIONAL TRANSMITTERS

Your garage door opener, transmitter, and this new transmitter must all be set to the same code to work.

NOTE: If your opener has 9 code switches instead of 12 as shown (fig. 1), this replacement transmitter will not work with your system.

FREQUENCY NUMBER

The frequency number is on a label on the back of your transmitter. This 3 digit number is also found on your opener power unit or separate receiver. If these numbers do not match, the new transmitter will not open the door.

SETTING THE CODE ON YOUR NEW TRANSMITTER

Your new transmitter is shipped with all 12 code switches set "ON". Locate the code switches on your existing transmitter or on the operator. Your new transmitter must be set to the same switch pattern to work.

1. Remove battery cover.

- Press firmly below arrow and slide cover off (fig. 1.)

2. Slide code switches to match setting on your existing transmitter or receiver.

- Use ball point pen or small screwdriver.
- Slide firmly up or down.

NOTE: If your original unit includes "one time" punch out keys instead of switches, set the switches of the new transmitter to "off" position to match the keys that have been punched.

3. Replace remote control battery cover.

- Slide battery cover back in place over battery.
- Press firmly and slide forward to snap in place.

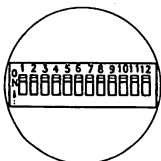 
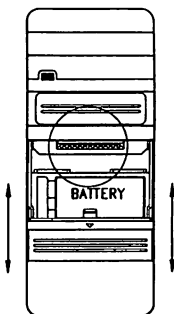 


Fig. 1

LOST OR STOLEN TRANSMITTERS:

If your transmitter has been lost or stolen, it is recommended that you change the code setting on all transmitters and receivers for security.

TRANSMITTER OPERATION:

- Press the button while the door is moving. Door will stop.
- Point the transmitter at the garage door and press button. Door will open or close.
- Press the button again. The door moves the other way.
- Door automatically stops at the end of open or close cycle.
- For maximum range, point remote control at door and press button.

VISOR CLIP ATTACHMENT:

1. Attach visor clip to remote control.

(fig. 2.)

- Spread wire ends apart.
- Insert wire ends into holes in sides of remote control.
- Clip can be inserted up or down.

2. Battery replacement (your remote control is battery powered)

- Remove battery cover by pressing firmly below arrow and slide cover off.
- Install new battery in same position.
- Use Eveready 9V Classic No. 216.
- Replace cover.

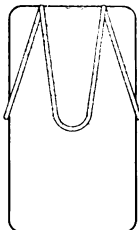 
 


Fig. 2

For additional information or help, call
CUSTOMER SERVICE 1-800-654-3643.

Faint, illegible text at the top of the page, possibly bleed-through from the reverse side.

Faint, illegible text at the bottom of the page, possibly bleed-through from the reverse side.